

LANGUAGE - LANGUE - SPRACHE - IDIOMA

```

-----
>> ENGLISH [1]+[ ]+[ ] <<
>> Decimal point = '.' <<
-----
FRANCAIS [ ]+[2]+[ ]
  Decimale = ','
-----
DEUTSCH [1]+[2]+[ ]
  Dezimalpunkt = ','
-----
ESPANOL [ ]+[2]+[3]
  Punto decimal = ','
-----

```

PRINTER - IMPRIMANTE - DRUCKER - IMPRESORA

```

-----
CANON (monochrome) [1]+[ ]+[ ]
  BJ-10ex, BJ-10sx (DIP 1 on, DIP 2-11 off)
  BJ-20, BJ-200 (DIP 1-12 off)
-----
>> CANON (monochrome) [ ]+[2]+[ ] <<
>> BJC-210, BJC-240, BJC-250, BJC-1000 etc. <<
-----
CANON (colour) [1]+[2]+[ ]
  BJC-240, BJC-250, BJC-1000 etc.
-----
PCL3, PCL3+ (monochrome) [ ]+[ ]+[3]
  HEWLETT PACKARD DJ 6xxC, 7xxC, 8xxC etc.
  HEWLETT PACKARD LaserJet 6L, LJ1100 etc.
  PANASONIC Laser KX-P6300, P6500 etc.
  OKI Laser 6E, 6EX etc.
-----
PCL5 (colour) [1]+[ ]+[3]
  HEWLETT PACKARD DJ 6xxC, 7xxC, 890C etc.
-----
EPSON (monochrome) [ ]+[2]+[3]
  STYLUS COLOR 400, 440, 600, 640 etc.
-----
EPSON (colour) [1]+[2]+[3]
  STYLUS COLOR 400, 440, 600, 640 etc.
-----

```